

**CARRIER CONTROL  
CARD 3**

**WAR EMERGENCY  
PUBLIC WARNING ACTION**

WAR EMERGENCY PUBLIC WARNING ACTION

THIS IS ..... CARRIER CONTROL POINT.

THE MASTER KEY IS LOCATED.....

THE STANDBY CARRIER CONTROL EQUIPMENT IS LOCATED .....

.....

ANY FAULT SHOULD BE IMMEDIATELY REPORTED TO.....

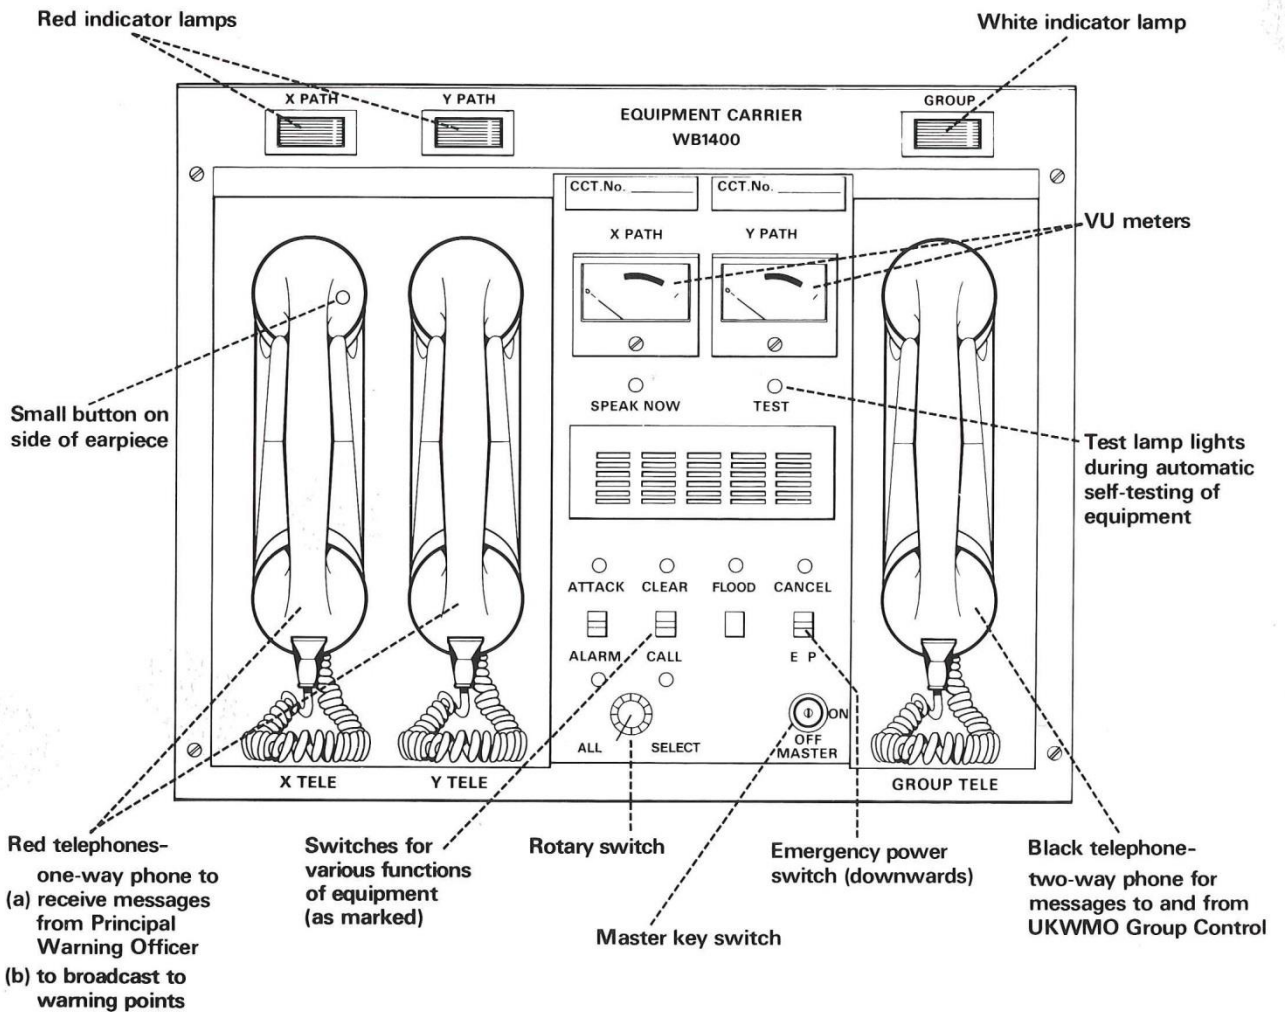


DIAGRAM OF CARRIER CONTROL EQUIPMENT

## WAR EMERGENCY PUBLIC WARNING ACTION

### CARRIER SYSTEM WB 1400

#### INSTRUCTIONS FOR USE OF CARRIER EQUIPMENT WB 1400

1. The equipment consists of a combined Handel Receiver and Warning broadcast/siren control operating unit situated in the Carrier Control Point.
2. WAR EMERGENCY PUBLIC WARNING ACTION

If one of both RED lamps flashes and the alarm sounds, IMMEDIATELY lift both RED handsets and listen for 'ATTACK WARNING RED'.

If the WHITE lamp flashes and the alarm sounds intermittently, lift the BLACK handset and listen for 'ATTACK WARNING RED', then acknowledge. If RED and WHITE lamps flash together, give priority to the RED handset. ATTACK WARNING RED may also be received from the BBC. It is imperative that a battery-powered wireless receiver be located within the hearing of the CCP Operator.

#### 2.1 BROADCAST OF ATTACK WARNING RED

Lift one of the RED handsets.

Press ALARM key downwards until the ALARM lamp lights. An ALARM signal of 6 seconds duration will follow.

When the ALARM signal stops, the SPEAK NOW lamp will light ..... immediately

press the small button on the side of the earpiece and say into the mouthpiece (3 times) 'ATTACK WARNING RED'.

Replace the RED handset.

TURN THE MASTER KEY CLOCKWISE THROUGH 90 DEGREES TO ARM THE SYSTEM TO THE LIVE CONDITION.

Press the ATTACK siren signal key upwards until the lamp flashes, then release the key to start the ATTACK WARNING RED siren operating sequence.

Check by monitoring the meters and by observing the siren monitor lamp adjacent to the Carrier Equipment WB 1400.

Now repeat the above broadcast twice more.

NOTE: The ATTACK lamp will continue to flash at a slower rate indefinitely, as a reminder that you have sounded the sirens, until cancelled by pressing the RED key upwards to the position marked CANCEL or overridden by a further attack warning message on the Handel Receiver or by operating the CLEAR key upwards to sound the ALL CLEAR siren sequence.

## WAR EMERGENCY PUBLIC WARNING ACTION

### 3. FALLOUT WARNING BLACK

When UKWMO Group Control calls a CCP, the WHITE lamp indicator will light and the call signal will sound intermittently for up to 1½ minutes, then automatically cancel if the BLACK telephone remains unanswered. The Group Control will only wait 3 seconds before calling other CCPs to speed the passage of fallout warnings.

Lift the BLACK handset and listen to the fallout warning message.

Acknowledge receipt of message by repeating it.

Replace BLACK handset.

IMMEDIATELY broadcast the Fallout Warning Black:-

Lift one of the RED handsets.

Press CALL key downwards until CALL lamp lights. An alerting signal of 6 seconds duration will follow.

When alerting signal stops, the SPEAK NOW lamp will light ..... immediately

press the small button on the side of the earpiece and give the fallout warning message in the stipulated format – e.g.:-

Fallout Warning BLACK Colchester 10  
Fallout Warning BLACK Colchester 10  
Fallout Warning BLACK Colchester 10

Replace the RED handset. After about 10 seconds the SPEAK NOW lamp will go out.

### 4. ALL CLEAR WARNING MESSAGE WHITE

White messages will be received from UKWMO Group Control via the BLACK handset.

If ALL CLEAR relates to all Warning Districts, broadcast the message (in the same way as the BLACK warning was issued in para 3 starting from 'Lift one of the RED handsets' and replacing the BLACK warning message with ..... 'Attack Message White'; spoken 3 times).

Replace the RED handset.

Press the CLEAR siren signal switch upwards and wait until the lamp flashes.

Release the switch. The ALL CLEAR siren operating sequence will follow.

If the ALL CLEAR relates only to specified Warning Districts named in the message, broadcast the message in the stipulated format:-

'Attack Message White, (e.g.) Maidstone 20' (3 times).

Replace the RED handset.

In no circumstances sound the sirens.

Repeat the relevant message twice more for a GENERAL ALL CLEAR and once more for broadcasts to specific Warning Districts.

### 5. In case of faulty operation, contact British Telecom Fault Control IMMEDIATELY.