

**CARRIER CONTROL
CARD 2**

**WAR EMERGENCY
PRE ATTACK ACTION**

EMERGENCY PRE-ATTACK ACTION

THIS IS CARRIER CONTROL POINT

THE MASTER KEY IS LOCATED.....

THE STANDBY CARRIER CONTROL EQUIPMENT IS LOCATED.....

ANY FAULT SHOULD BE IMMEDIATELY REPORTED TO.....

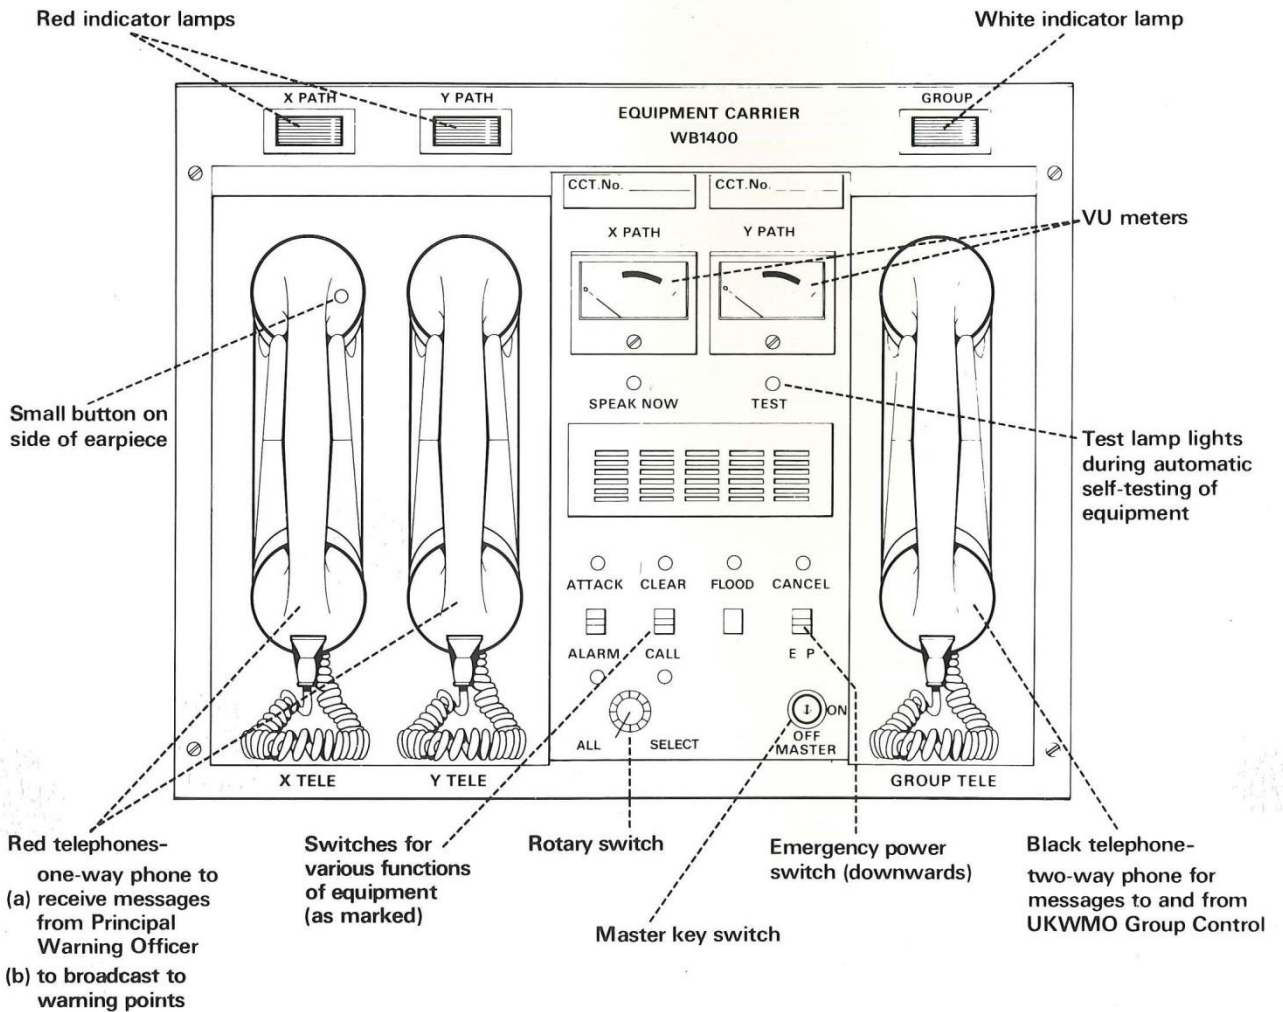


DIAGRAM OF CARRIER CONTROL EQUIPMENT

EMERGENCY PRE-ATTACK ACTION

CARRIER SYSTEM WB 1400

INSTRUCTIONS FOR USE OF CARRIER EQUIPMENT WB 1400

1. The equipment consists of a combined Handel Receiver and Warning broadcast/siren control operating unit situated in the Carrier Control Point.

2. WAR EMERGENCY PRE-ATTACK TEST PROCEDURE

Immediately following the receipt of instructions to activate the Attack Warning System, make an inspection of both main and stand-by CCP equipments.

Obtain and insert the MASTER KEY but do NOT turn the key to arm the system to the live condition.

2.1 CCP – UKWMO GROUP CONTROL CIRCUIT TESTING

UKWMO Group Control should contact you via the BLACK telephone. You should acknowledge their message by repeating it.

Call UKWMO Group Control by pressing the WHITE indicator lamp. Hold for 2 seconds.

The WHITE lamp will light and an alarm will sound.

Release the switch.

Lift the BLACK handset and when Group Control answers, say Carrier Control (Point) testing (time).

The Group should acknowledge 'Roger'.

If you do not hear from Group within a reasonable time period, you should initiate the contact in the same way.

2.2 CARRIER RECEIVER TESTING

Broadcast the pre-attack test message.

Set the rotary switch to ALL.

Lift one of the RED handsets.

Press CALL key downwards until the CALL lamp lights. After an alerting CALL signal lasting 6 seconds, the SPEAK NOW lamp will flash immediately

press the small button on the side of the earpiece of the RED handset and say into the mouthpiece 'Test call, testing' (3 times), followed by,

'A test of the attack warning signal will now follow' (3 times).

Release handset button.

When SPEAK NOW lamp goes out, press ALARM key downwards until ALARM lamp lights, followed by a test warning signal lasting 6 seconds.

Wait until SPEAK NOW lamp goes out then press CALL key downwards until the CALL lamp lights. After an alerting CALL signal lasting 6 seconds, the SPEAK NOW lamp will flash immediately

press the small button on the side of the earpiece of the RED handset and say into the mouthpiece twice:-

'A test of the Attack Warning Signal has just been made'.

Replace RED handset.

NOTE: If one or both RED lamps begin to flash and the alarm rings, IMMEDIATELY ABANDON the pre-attack test procedure.